

PAC 600 PAC 800 PAC 800 comfort

Installation and User Manual



Advanced Battery Chargers



Table of contents	POWERFINN PAC 600/800.....	2
	General.....	2
	Installation.....	3
	Operations.....	4
	Safety Instructions.....	5
	Troubleshooting and repair.....	6
	Guarantee.....	6
	Appendix A.....	6
	Appendix B.....	7
	Appendix C.....	7

Important Read this manual before installing or operating the battery charger. It must be ensured that children do not play with the device.

**PAC 600
PAC 800** Powerfinn PAC 600 and PAC 800 battery chargers use modern switching technology. The intelligent micro controller extends the life of the battery by supervising the charging process. The charger is compact, lightweight and meets the EU safety and EMC requirements.

General PAC chargers are available for a variety of battery types. The charger type is indicated on the label attached to the side of the charger.


Be sure to always use the correct type of charger. The charger type should correspond to the battery construction (sealed, vented, etc.) Attempting to charge a battery with the wrong type of charger may result in considerable damage.

Check the battery to ascertain that the “five hour capacity” (in ampere-hours, Ah5) is between 5 and 14 times greater than the nominal current (in amperes) of the charger. E.g. a 10A charger is suitable for charging batteries with a 5-hour capacity of 50Ah-140Ah.

Installation

The following points must be respected when choosing a location for the charger.

1. The location must be dry, dust-free and indoors. The acceptable temperature range for operation is 0°C to +40°C. A higher ambient temperature will limit the current supply, see appendix A on page 6.
Caution: The charger is not waterproof. Keep the charger dry and away from areas with high humidity in order to avoid the risk of electrical shock and damage to the charger.
2. The equipment may be installed horizontally or vertically. The horizontal position, however, is recommended with a height of 1 meter above floor level.
3. To ensure sufficient ventilation, leave a free space of at least 10 cm around all sides of the charger. Do not cover the unit.
4. The charging process generates explosive hydrogen gas. Keep the area well ventilated. Never use an open flame and avoid sparks close to the battery and charger.
5. The floor and material below the charger must be fire-resistant. Install the charger using the railed assembly plate (see figure). With vertical mounting, place the vertical slide barrier downwards. Fasten the assembly board to the wall using the mounting holes in the back of the board. Next, place the charger in the assembly board by inserting the rails at the bottom side of the charger, into the rail guides. Finally, fasten the charger to the assembly board by using the small screws on the side of the board. Fix the sticker (see appendix C), if provided, to the topside of the charger. Plug the main power cord into an earthed mains outlet.

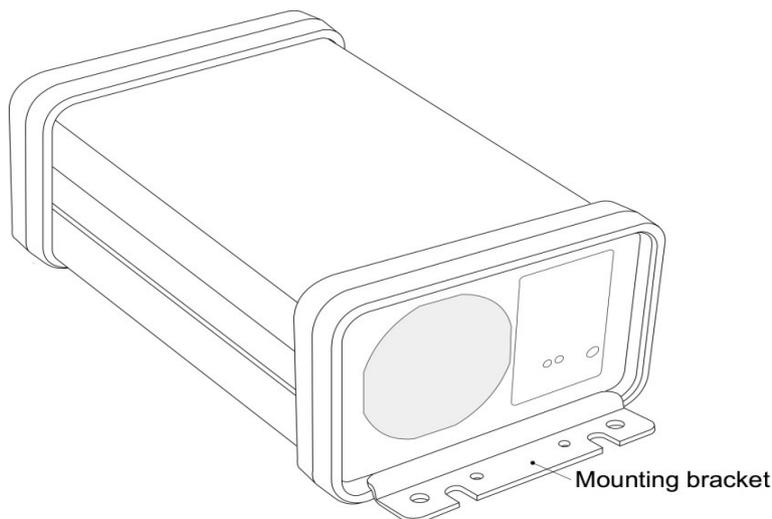

Operations

Read these operating instructions before using the charger for the first time. *Read the safety instructions in the next paragraph thoroughly.*

To charge a battery with the PAC charger, follow these instructions:

1. Ensure that the charger is switched off and that the work environment meets the conditions described in the previous paragraph.
2. Connect the charger cables to the battery terminals: the positive (+) cable to the positive (+) terminal and the negative (–) cable to the negative (–) terminal. The positive cable is red and has a yellow cable marker with a + symbol. The negative cable is black. The positive battery cable is commonly marked with red.

Warning: Explosive gases. Prevent flames and sparks. Provide adequate ventilation during charging.

3. Turn the power on by turning the switch to position '1'. The fan will operate when the charger is turned on. The charger continuously monitors its own temperature level and reacts by controlling the charging current and fan speed. The charger will not overheat under normal conditions.
4. Go to step 8 in case the charger is programmed for constant voltage charging.
5. During the charging process the STATUS LED light is continuously orange. A constant red color indicates either too low or too high a voltage, or that the battery is not connected to the charger. Turn the power off by turning the switch to the '0' position and make sure that the battery is suitable for the charger. The battery voltage should be 8-16V for a 12V charger and 16-32 V for a 24V charger. Check the cable connections and return to step 2.
6. The battery is fully charged as soon the STATUS LED is green.
7. The charger will switch to maintenance charging about 16 hours after beginning to charge the battery. The process will terminate and the STATUS LED will flash intermittent red in case the battery is not fully charged after PAC switches to maintenance charging. This may occur if the battery has a defect, or if the charger and the battery are incompatible (see page 2 'General').
8. This step applies only to chargers programmed for constant voltage charging. During the charging process the STATUS LED light is continuously orange. The charger does not check the cable connections and starts charging immediately after the power is switched on.
9. Always turn the power off before disconnecting the cables by turning the switch to the '0' position. This avoids heavy sparking.

Safety Instructions

Car use: Always refer to the user manual of the car before connecting the charger to the car battery (see step 2) and removing it after finishing charging (see step 5). The battery terminal not connected to the car chassis has to be connected first. The other connection is to be made to the chassis far away from fuel lines and from the fuel induction i.e. carburetor. After finishing charging, unplug the charger from the mains before removing the charger cables.

In addition to the safety measures mentioned under 'Installation' (page 3), the following personal precautions should be taken whenever charging batteries.

1. For emergency situations ensure in advance that help is available in time of need.
2. Batteries contain acid that is harmful to the eyes, skin and clothes. Always wear overalls and safety goggles. Never touch the eyes with unwashed hands after handling batteries.
3. Ensure that a working, fresh water tap is available. If acid gets into the eyes or on the skin, immediately rinse the area with plenty of water for several minutes. If visible injury occurs, contact a physician immediately. In case of eye injuries, always contact a physician.
4. The charging process generates explosive hydrogen gas. Do not smoke or otherwise bring burning or sparking matter to the vicinity of the charger when it is in operation.
5. If a short circuit occurs, the battery may explode or the item causing the short may melt. Keep the work area clear from tools and debris. Remove jewelry, watches etcetera before working with the battery.
6. The power cord should be unplugged and the battery must be disconnected from the charger in case the equipment is left unused for a longer period of time.
7. The charger must be situated away from heat sources like radiators and heat registers and in such a way that no objects can fall or liquid can be spilled into the cabinet openings.
8. Never attempt to recharge non-rechargeable batteries.
9. This device is not meant to be used by children or people whose physical, sensory or mental attributes or lack of experience and knowledge prevent them from using the device safely unless a person responsible for their safety supervises them or has instructed them how to use the device.

Trouble-shooting and repair

Guarantee

Appendix A



The most common faults are described under 'Operations' (page 4).

If the cause of malfunction cannot be found, contact your retailer or the manufacturer. Only authorized persons can repair the charger.

The equipment has a guarantee of two years from the date of purchase. Guarantee covers manufacturing and component failures and is valid only if the equipment is installed and used according to the instructions in this manual.


Keep the receipt as evidence of the date of purchase.

The following graphs show the effect of ambient temperature on output power and fan speed, as well as the effect of input voltage on output power.

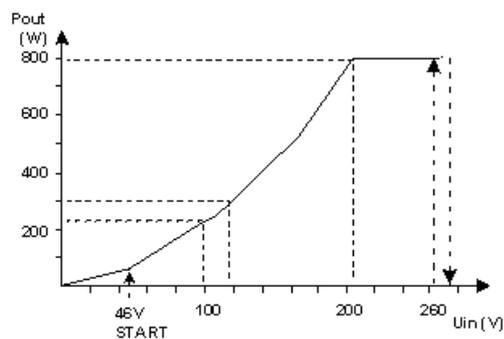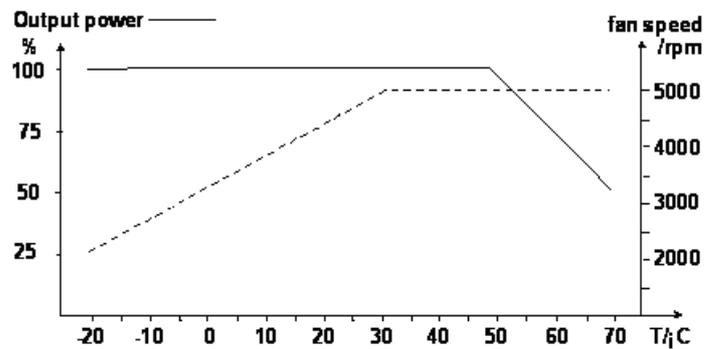


Appendix B

Example of a front panel label (varies per model).

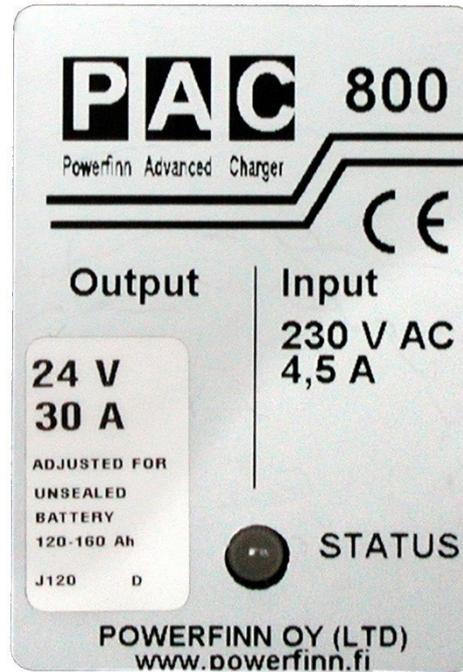

Appendix C

Example of a top label (varies per model)

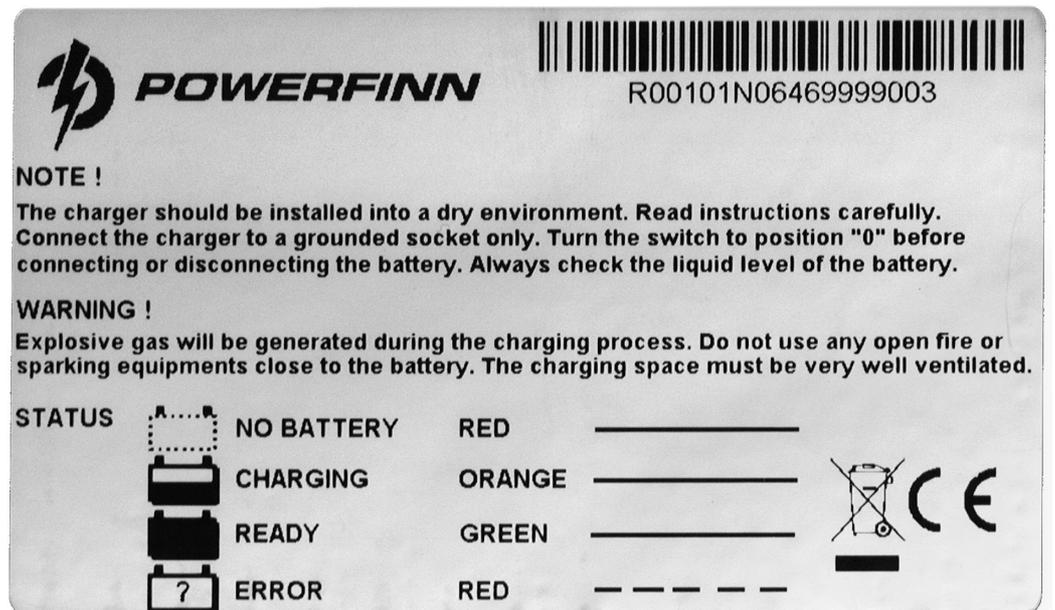

Note:

Constant voltage chargers do not have DISCONNECTED and READY markings mentioned on the label.



Perämiehenkatu 6
24100 Salo
tel. +358 (0)2 777 290
fax +358 (0)2 777 2918
info@powerfinn.fi
www.powerfinn.fi